


Mast and Boom Serial Number Locations

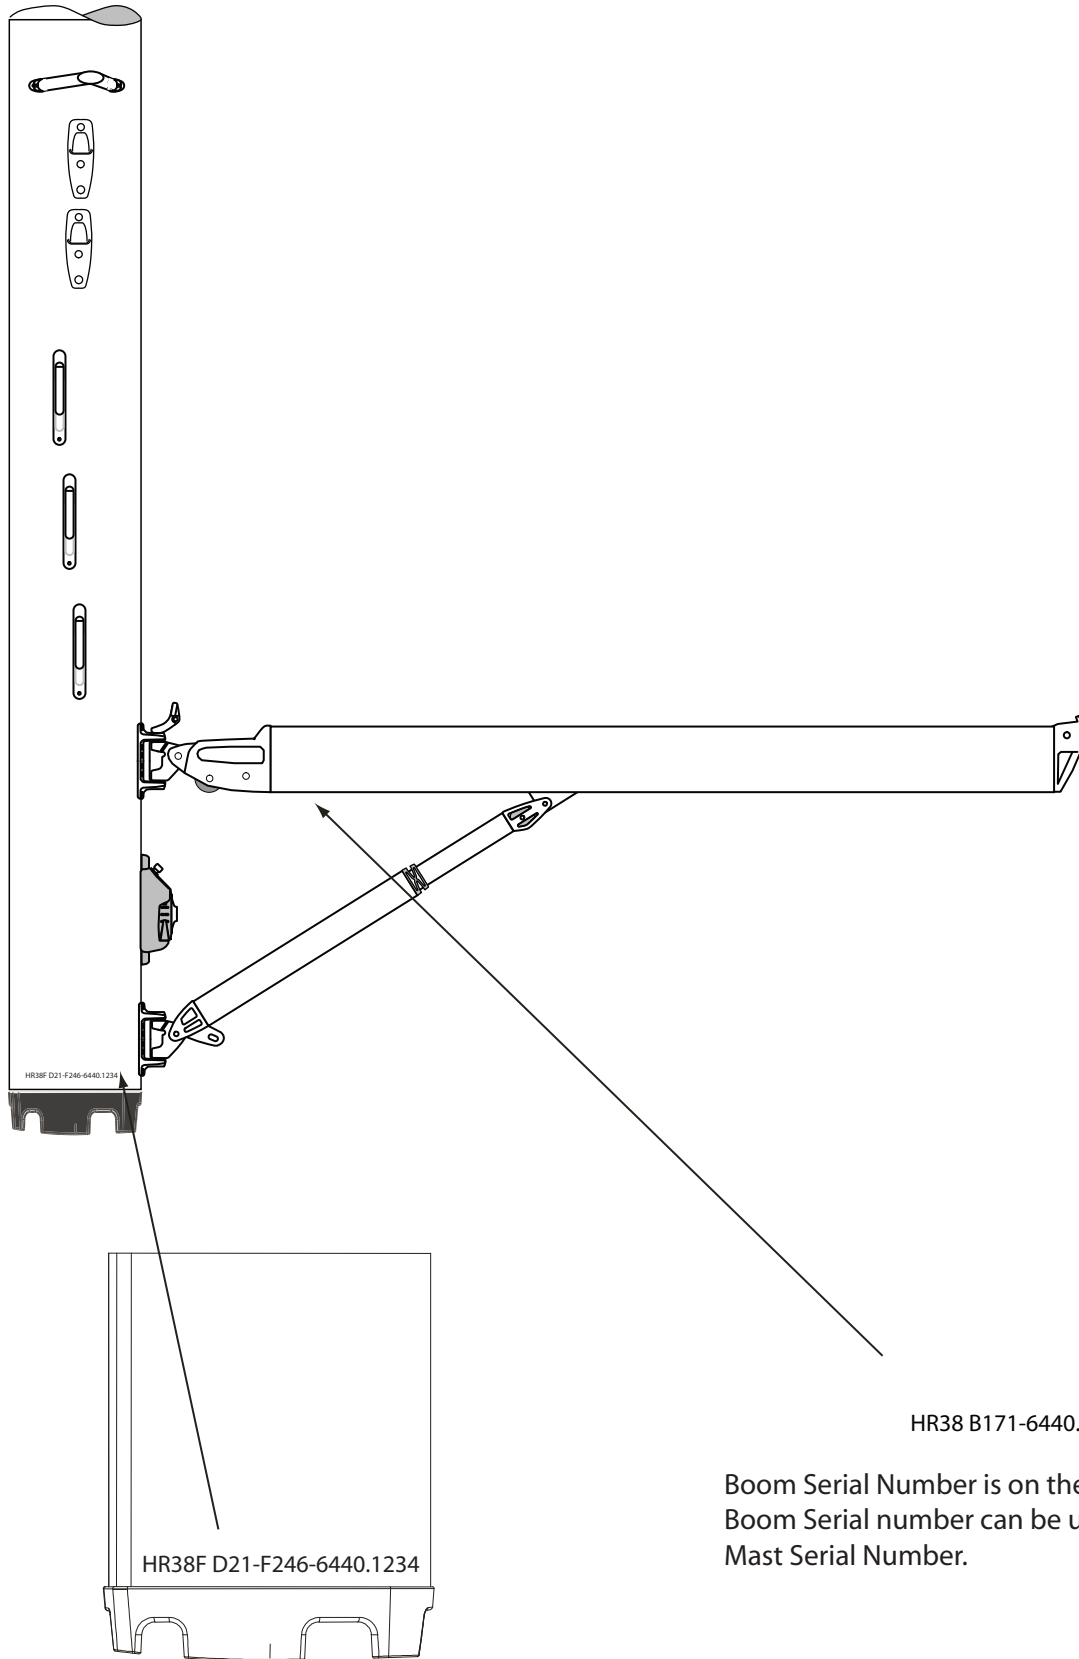

Boom Serial Number is on the bottom of the boom.
Boom Serial number can be used to cross reference
Mast Serial Number.